

EMpower Data Visualization Tools




2. Time Series and Spectra
3. General Features
4. Toolbar Description
5. Processed PNT Data Plot
6. Edit Cross Powers
7. Polar Editor Features
8. Time Series Editor Features

Time Series and Spectra

(Basic graphics)






1. Use the **Mode** drop-down list to switch between **Time Series** and **Spectra**
2. Select the **Sample Rate** using the **Data Type** drop-down list
3. Define the plot range start using **Viewing time from (UTC)**, the navigation buttons or the scroll selector
 - 3a. If viewing a continuous time series decimation level, define the view range length using the **Duration(s)** field
 - 3b. If viewing a sparse decimation level (i.e. TD_24) the length on the view will be on **chunks per slot**
4. Select scaling per plot using **Unify Vertical Scale by**
5. Use **Metadata Tag** to position the legend within the plot
6. Using the scroll wheel will zoom in or out in the X axis only.

2

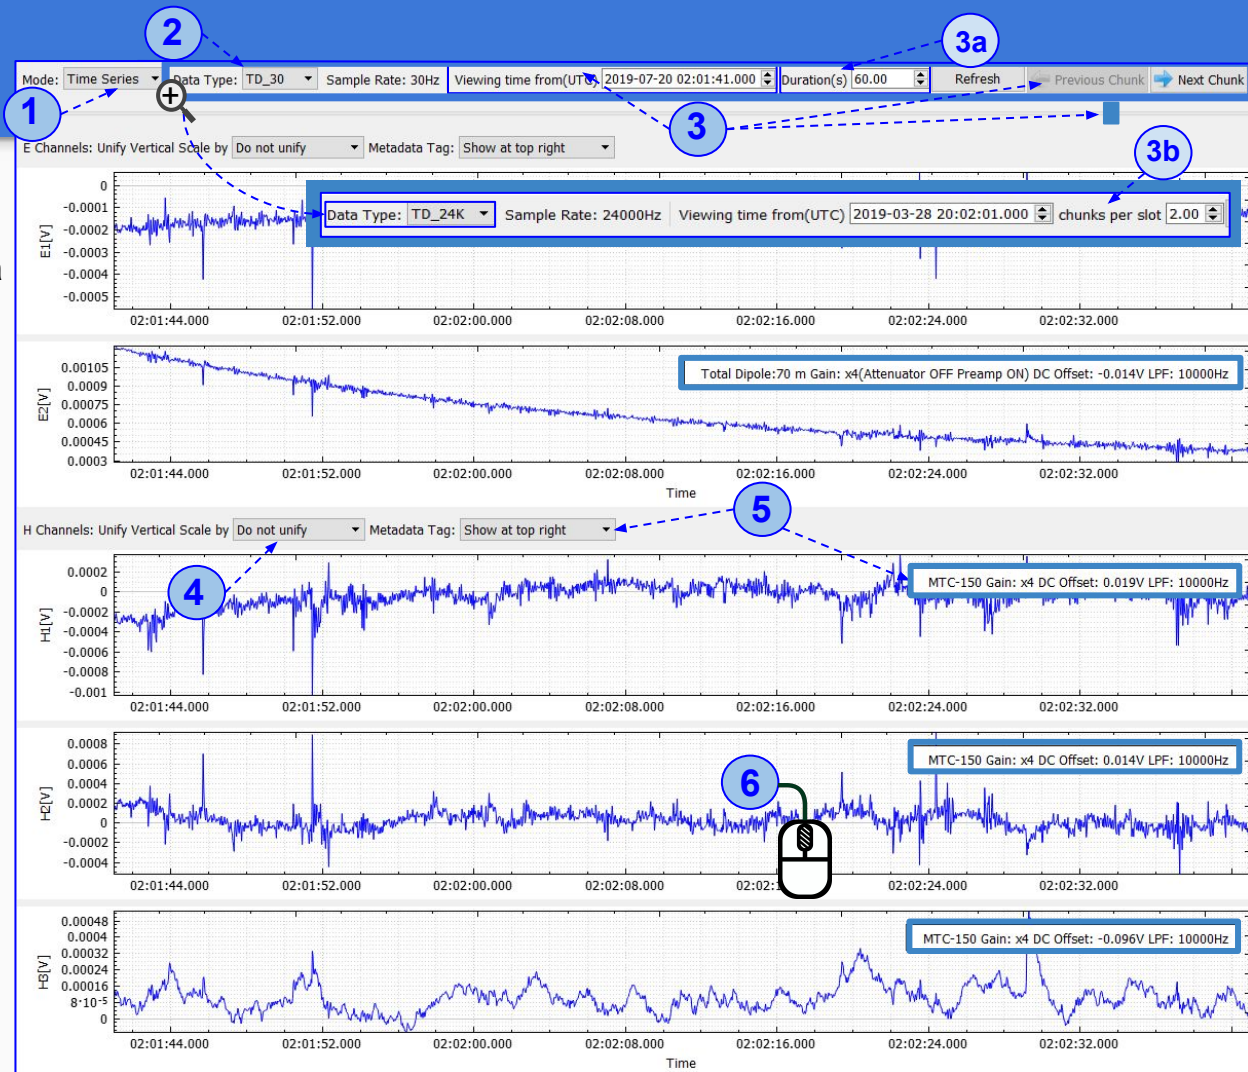

General Features

1. Zoom in/out using the scroll wheel, this will zoom on the Y and X axis.
2. Clicking the X-axis (*highlighted in blue*) to zoom in/out using the scroll wheel will zoom on **X-axis** only.
3. Clicking the Y-axis (*highlighted in blue*) to zoom in/out using the scroll wheel will zoom on the **Y-axis** only.
**These features do not apply to Time Series and Spectra*
4. Click on a point to see information about the selected point (*use the arrow keys to move between points*). **This information may be different depending on the plot*
5. Right clicking on the plot, offers the options **Full View** or **Save PNG**

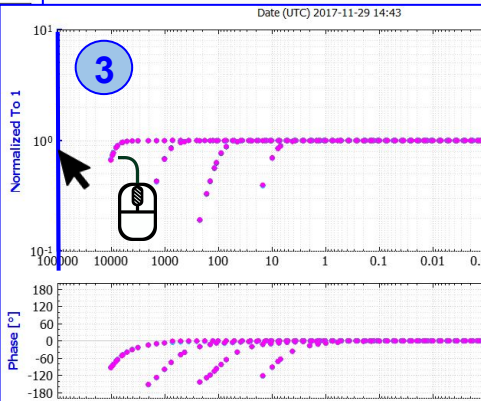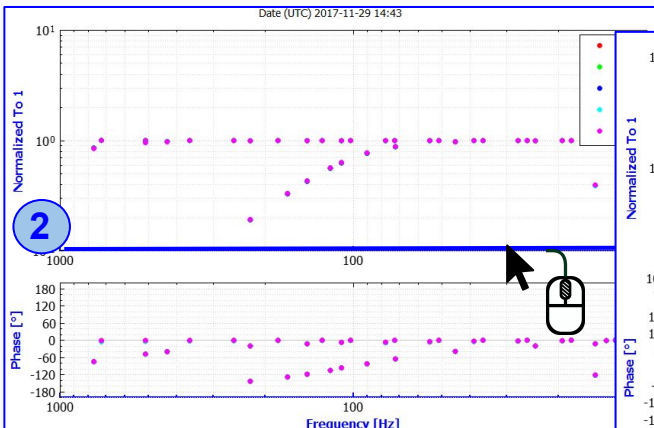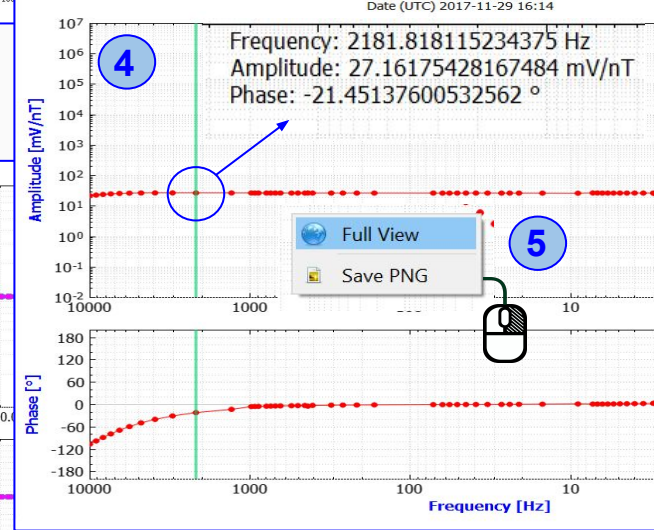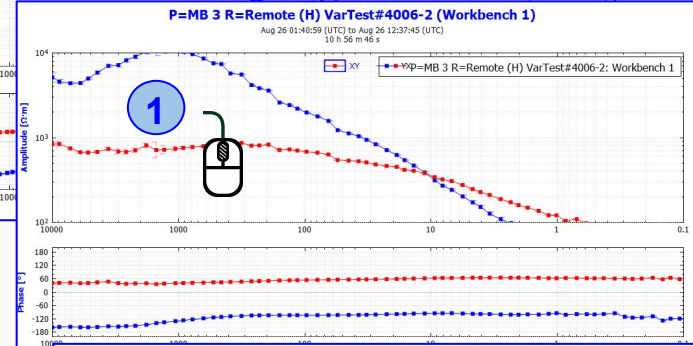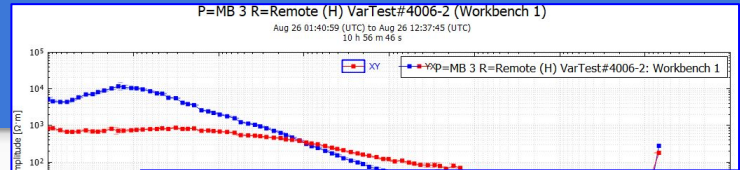

Toolbar Description

Toolbar available on:

- a. Processed Data tab
- b. Processing Queue

1. Error bars / Grid
 - Shows/hides error bars range
 - Grid icon scales the view to the error bars or to the plot
2. Print / Export to a CSV file
3. Amplitude (Log/Linear)
4. Frequency (Log/Linear)
5. Phase (Degrees/Radians)
6. Legend (Top right/left and Bottom right/left)


The screenshot shows the software interface with a toolbar at the top and a processing queue window at the bottom. The toolbar includes icons for Resistivity, Print, Export, Amplitude (Log/Linear), Frequency (Log/Linear), Phase Unit (Deg/Rad), Phase Mode (Separate/Overlaid), and Legend (Bottom Left). The processing queue window shows a table of processed site names, references, statuses, and progress.

Processed Site Name	Reference	Status	Progress	Elapsed Time	Estimated Remaining Time
P=S6 5C R= (Local H)	Magnetic	Processing	11%	31 s	4 m 22 s

Processed PNT Data Plot



This tab shows the Parallel Noise recordings

1. Select the **Site**
2. Select the **Channels Signal** to be displayed
3. Control to **Print** the plot
4. Control to **Export** the values in CSV format

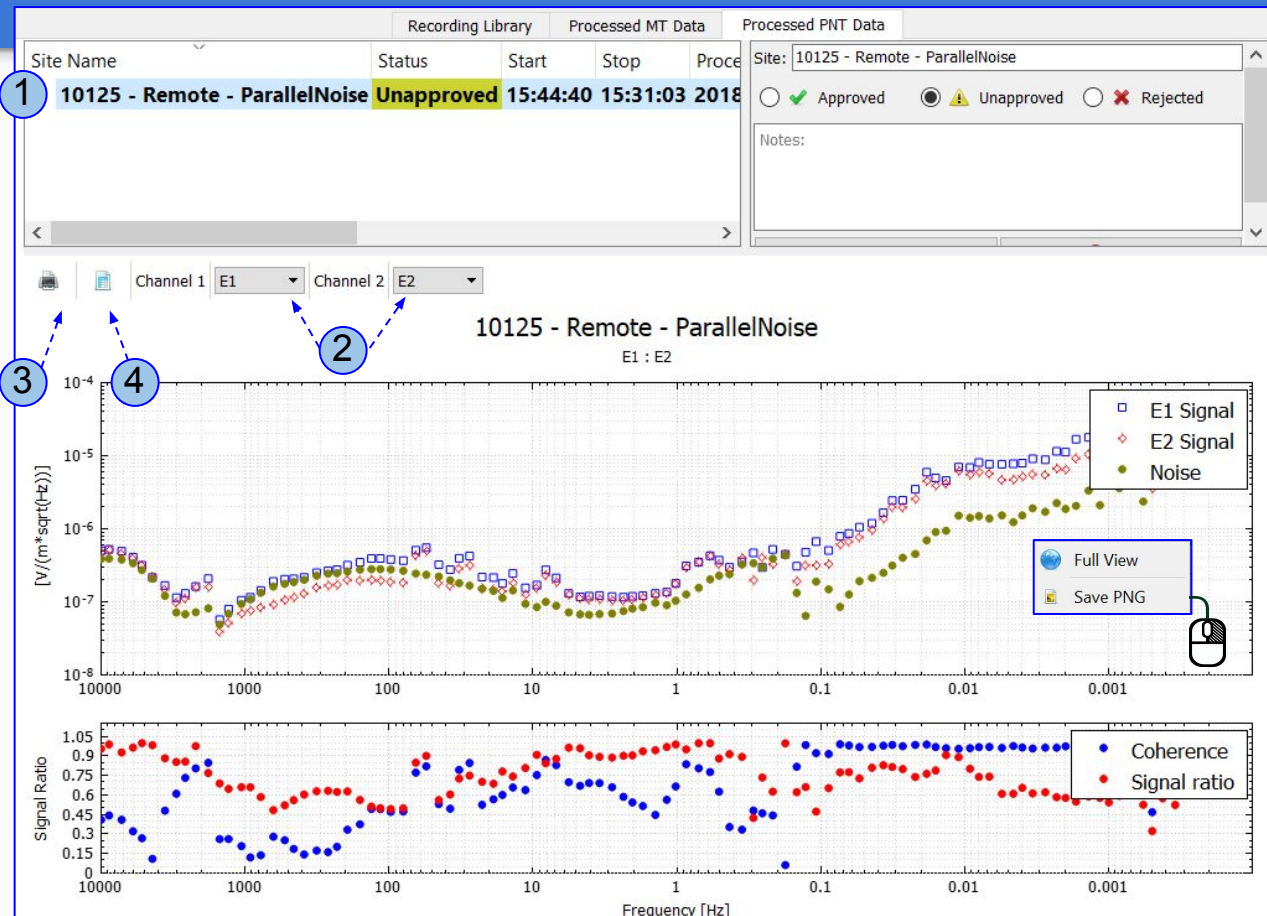




Edit Cross Powers

1. Workbench manager
 - Create a new workbench
 - Create masks for
 - a** - Robust Mask
 - b** - Polar Editor
 - c** - Time Editor
2. From the resultant plot (*select a frequency*)
3. Time Editor (shows how data changes over time)
4. Polar Editor (*Expressed in polar coordinates, with radius as a function of angle*)

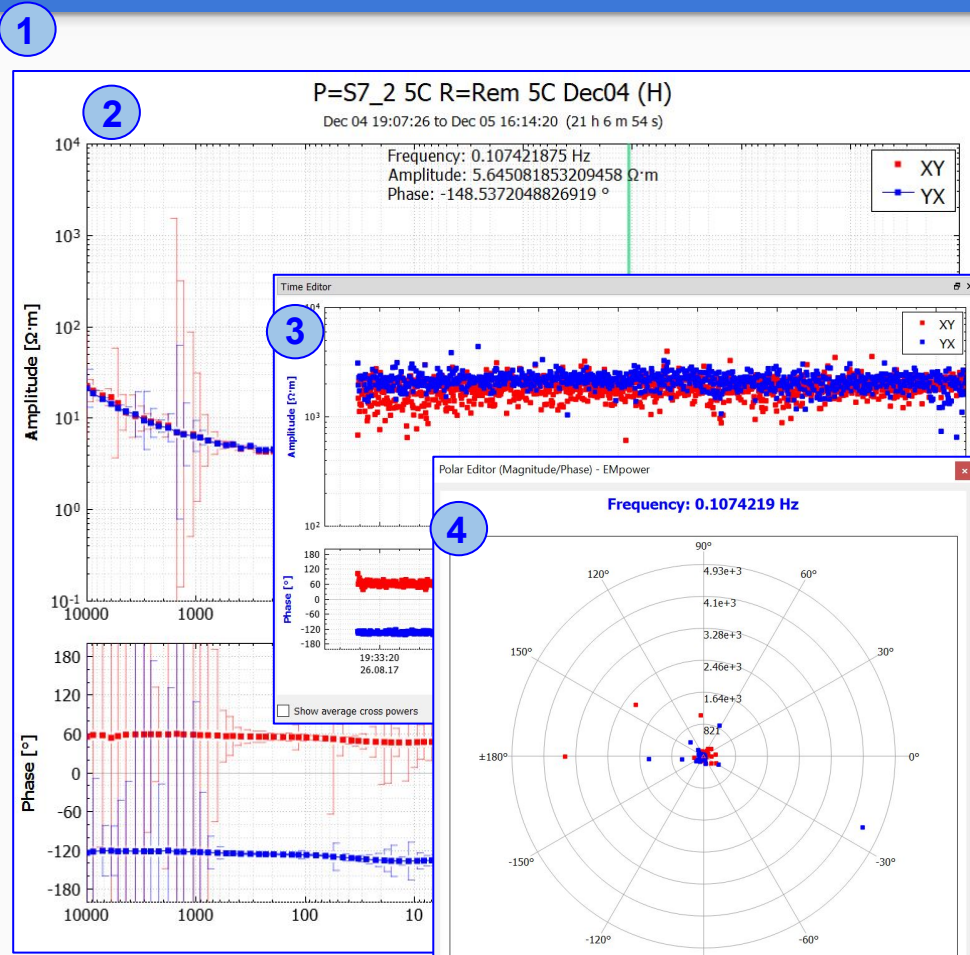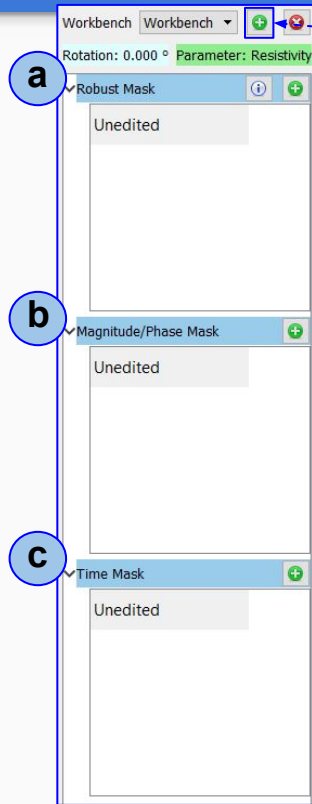

Polar Editor Features

1. Create a new Workbench
2. Create a new Mask for the Polar Editor
 - Adjust the Global **XY** and **YX** rejection settings as needed
3. Choose a Frequency and select from the **Linear** or **Cubic** views
4. Click **XY** or **YX** button to switch between ranges. Edit the ranges by either dragging the handles with your mouse or manually entering values into the spin boxes. (see the [Crosspower Editor](#))

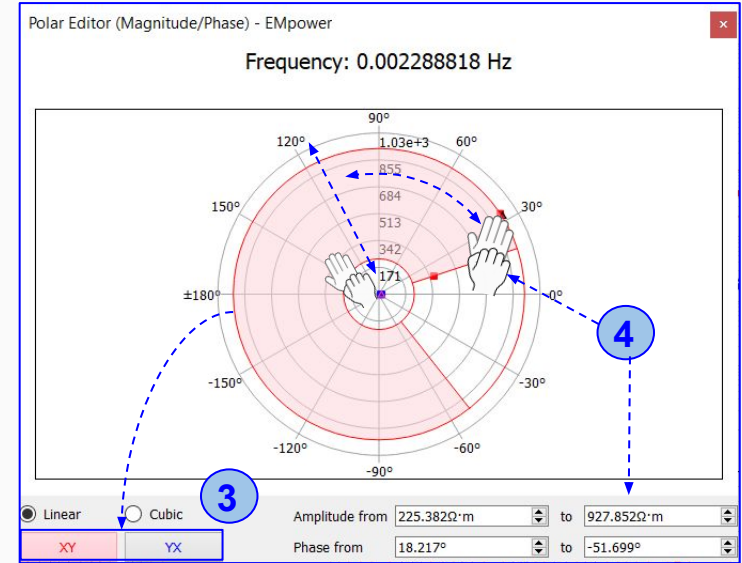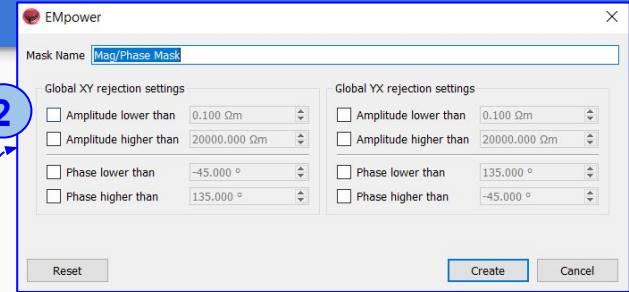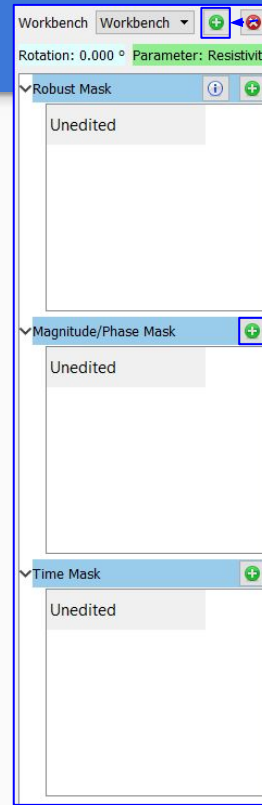

Times Editor Features

1. Create a new **Workbench**
2. Create a new **Mask** for the **Time Editor**
3. To Add a New rejection area
 - Click the a **Add New Section** button
 - Select the area by dragging the handles with the mouse to the right or left.
4. Right-click to delete the selection

