
MTU-5D Quick Start Guide



- MTU-5D (components)
- Creating a Configuration File
 - Configuration Creator
 - Electric Channel Settings
 - Magnetic Channel Settings
- Saving a Configuration File
- MTU-5D Connections
- SD Card Recording Data
 - Stopping a recording
 - Importing and Evaluating Data
- Evaluate
 - View Recording Details
- Process Data

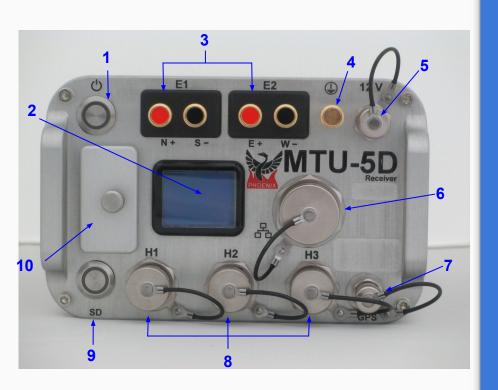


| Components | |
|------------|---|
| 1 | Power/Record button and indicator |
| 2 | Display |
| 3 | E1 (Ex) electrode connectors E2 (Ey) electrode connectors |
| 4 | Ground electrode connector |
| 5 | 12VDC power input |
| 6 | LAN connector |
| 7 | GPS antenna connector |
| 8 | H1 (Hx) magnetic sensor connector H2 (Hy) magnetic sensor connector H3 (Hz) magnetic sensor connector |
| 9 | SD card button and indicator |
| 10 | SD card slot and cover |

Creating a Configuration File

Open **EMpower** and click the **Prepare** button Complete the required information


- 1. Select the Receiver Type
- 2. Recording
 - 2.1. MT Configuration Creator
- 3. Calibration
 - 3.1. Sensor Calibration
 - 3.2. Receiver Calibration
 - No additional configuration needed
- 4. System tests
 - 4.1. White Noise
 - 4.2. Parallel Noise Configuration Creator
 - 4.3. Self Test
 - No additional configuration needed

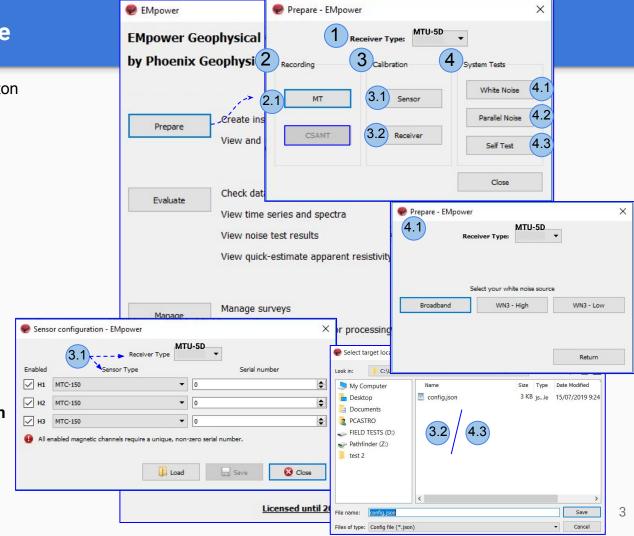

Configuration Creator


Complete the information:


- Check that the Receiver type is MTU-5D
- 2. Select the **Schedule**
 - 2.1. For a specific schedule use, Single Shot, Daily or Weekly schedule and click Add Schedule to define the time and/or date
- 3. Channels Settings (see pages 6-7)
- 4. Receiver Settings
 - Define the Sampling Mode and/or Sampling Rate
- 5. Configuration Layout

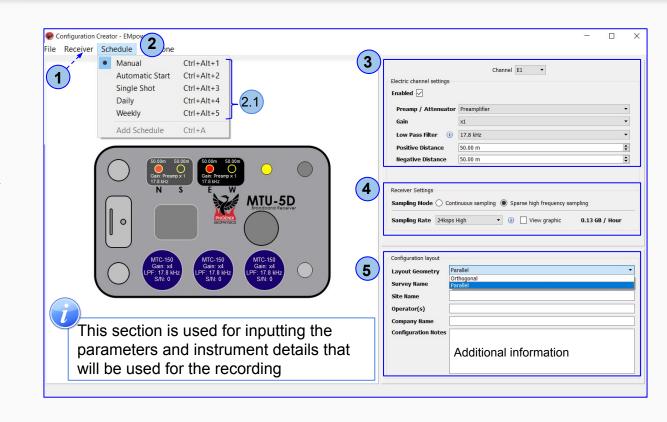

Electric Channel Settings


- Select the Electric channel
- **2. Enable** or **Disable** the channel(s)
 - Disable the channel(s) If you do not plan to use them during the recording (This will save space on the SD card.)
- 3. Complete the information in the **Electric** channel settings

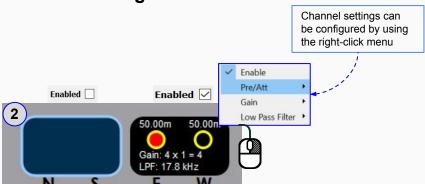


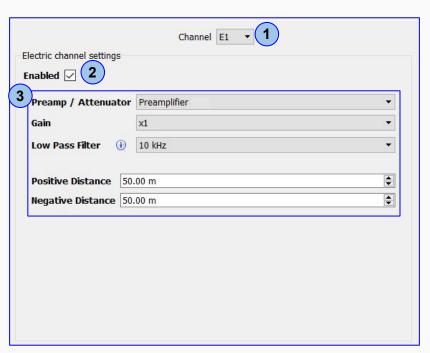

Magnetic Channel Settings

- 1. Select the **Magnetic** channel
- 2. **Disable** or **Enable** the channel(s)
 - Disable the channel(s) if you do not plan to use them during the recording (This will save space on the SD card.)
- Complete the required information in the Magnetic channel settings

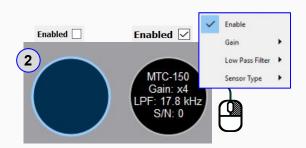

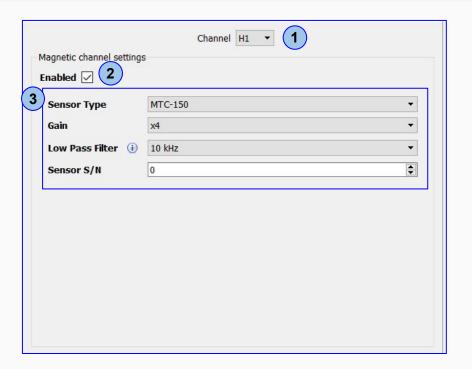



Channel settings can be configured by using the right-click menu or by using the Magnetic channel settings section

Saving a Configuration File

- The Computer must be equipped with an SD card slot or use a USB card reader
- 2. Click the File menu
 - Save or Ctrl+S
 - Select the SD card
 - EMpower will automatically create the file "config.json"
- Save the configuration file (config.json) in the root folder of the SD card
- **4.** Open the file Explorer
 - o Right click SD card drive
 - Select Eject option
 - Pull out the SD Card

Only SD cards supplied by Phoenix are supported. Other SD cards that comply with the SDXC standard may work depending on the card rating and environmental conditions

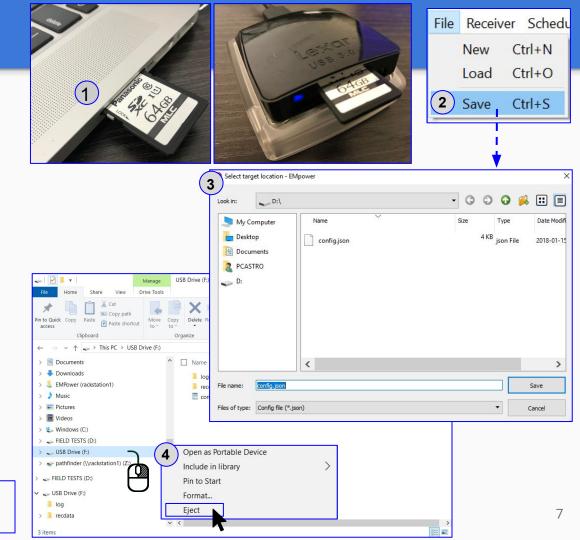

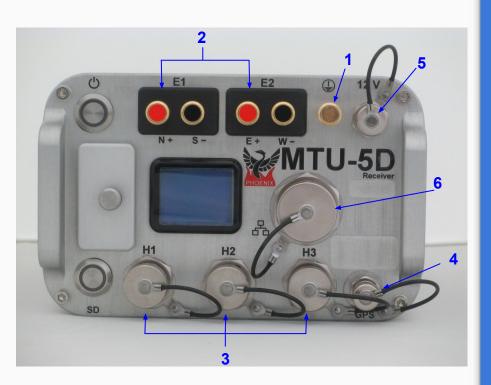

In the field, it is often most efficient to connect the components to the receiver following the order on the right

MTU-5D Connections

Start by connecting:

- 1. Ground electrode
- 2. Electrodes to channel **E1**(Ex) (N+, S-) and channel **E2**(Ey) (E+, W-)
- **3.** Magnetic sensors to channels **H1**(Hx), **H2**(Hy) and **H3**(Hz)
- 4. GPS antenna
- **5.** 12V DC Power Source
- **6.** Network connector

SD Card - Recording Data

Recording

- Insert the SD card
- 2. To turn on the receiver, press the **Power** button briefly
 - **2.1.** Wait until both **LEDs** are solid blue
 - 2.2. Automatic Start recording
- If the schedule type was configured as Manual, press the Power button to start recording



Press the power button briefly and release




2.1 Automatic Start

The recording starts automatically according to the schedule



3 Press the power button briefly and release



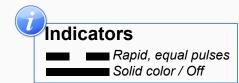

Stopping a recording

- **1.** Press the **Power** button briefly and release to stop recording
 - Wait until both LEDs are steady blue
- 2. Turn off the receiver, pressing the **Power** button for a few seconds the **LEDs** will flash red
 - Wait until both LEDs turn off.
- 3. Eject the SD card
 - Press the SD card and release, pull the SD card

1 Press the **Power** button briefly and release

Recording Saving Ready

2 Keep pressing the power button 3 sec and release

SD Shutdown Off


3






Importing and Evaluating Data

- 1. Click the **Evaluate** button
- 2. Select View data
- 3. Select the SD card
 - The recording creates two folders, log and recdata
- Open the recdata folder and select the recording folder and click Choose

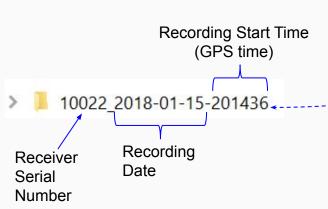

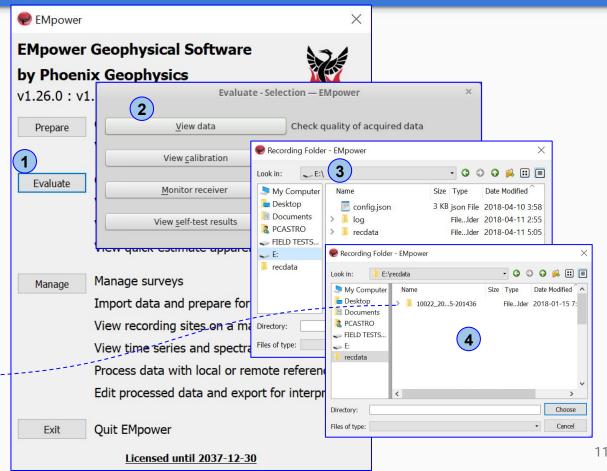


Evaluate

Review and Process the recorded information

- Review the Electrode Resistance values and make the necessary corrections
 - Electrode Distance (m) to GND
 - o E-Azimuth
 - External Filter
- Ensure that the magnetic sensors were detected and make the necessary corrections
 - Serial #
 - Polarity
 - H1-H-3 Azimuth
- 3. View Recording Details (see page 14)
- **4. Process** the recorded data after the reviewed the information (see next page)



The warning icon indicates that something might be wrong with the recording, review the recording information and make necessary changes

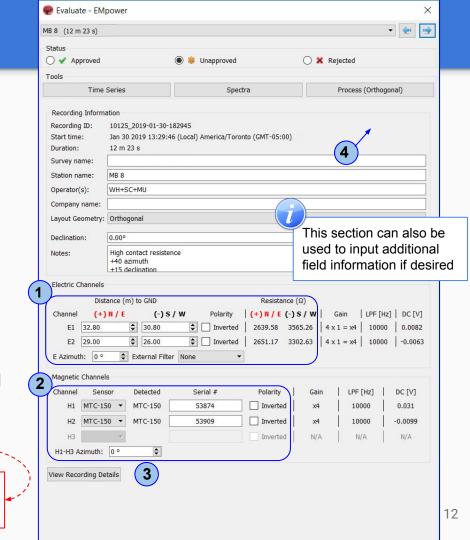


Process Data

- I. Click the **Process** button
 - Verify that the channels and references selected are the desired ones

Evaluate - EMpower

- **2.** Define the time period by entering a start and end date/time
- 3. Enable the electric power grid filter that corresponds to the frequency carried by the power lines in the survey region (50Hz, 60Hz or None)
- 4. Click the **Process** button
- A live display of the resistivity curve will appear after a few seconds
 *This resistivity curve is not saved. It is purely for 0

*This resistivity curve is not saved. It is purely for QC purposes).

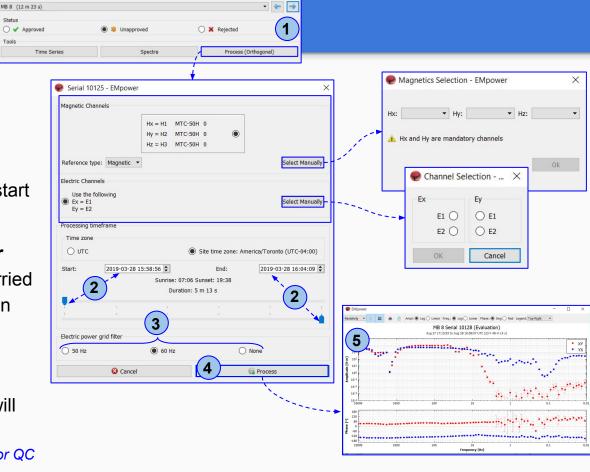

View Recording Details

Review that the following levels are within valid limits for quality control:

- 1. Battery Voltage
- 2. Internal Temperature
- 3. Number of Satellites
- 4. Saturated Frames
 - If saturation is not close to ~0%, review the channel configuration (see pages 4 - 6), the channel gain might be too high and/or there is artificial noise on your site
- 5. Time Series Level

