
MTU-5C Quick Start Guide for MT



MTU-5C (components)	2
Creating a Configuration File	3
Configuration Creator	4
Electric Channel Settings	5
Magnetic Channel Settings	6
Saving a Configuration File	7
MTU-5C Connections	8
SD Card - Recording Data	9
Stopping a recording	10
Importing - Field QC	11
Field QC	12
Process Data	13
View Recording Details	14
Technical Support Contact	

Version: 220914.1 ID: DAA19

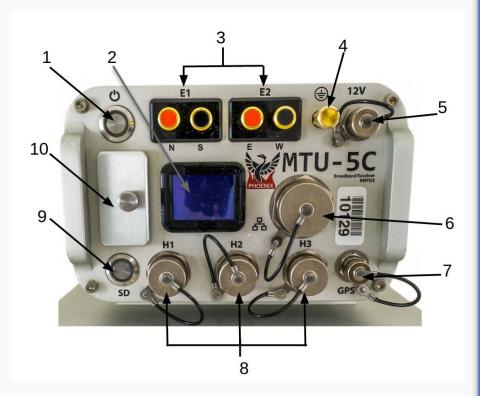

Components		
1	Power/Record button and indicator	
2	Display	
3	E1 (Ex) electrode connectors E2 (Ey) electrode connectors	
4	Ground electrode connector	
5	12VDC power input	
6	LAN connector	
7	GPS antenna connector	
8	H1 (Hx) magnetic sensor connector H2 (Hy) magnetic sensor connector H3 (Hz) magnetic sensor connector	
9	SD card button and indicator	
10	SD card slot and cover	

Creating a MT - Configuration File

Open **EMpower**, click the **Prepare** button and complete the required information


- 1. Select the Receiver Type
- 2. Recording
- 2.1. MT Configuration Creator

Use the Calibration and System Test options as needed

- 3. Calibration
 - 3.1. Sensor Calibration
- 3.2. Receiver Calibration (No additional configuration needed)

4. System tests


- 4.1. White Noise
- 4.2. Parallel Noise Configuration Creator
- 4.3. Self Test (No additional configuration needed)

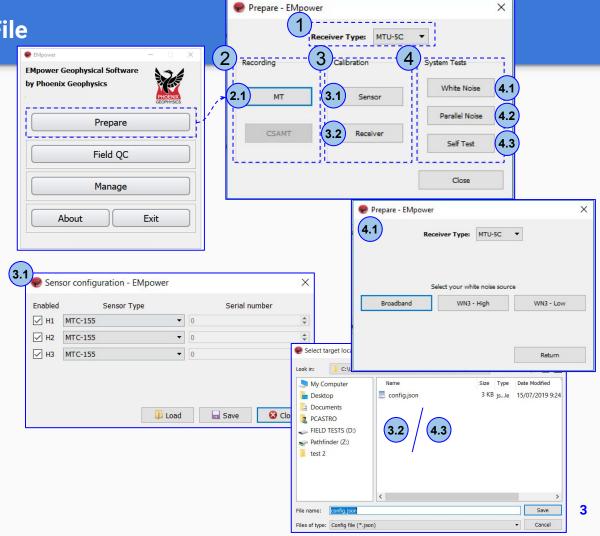

Configuration Creator

- 1. Check that the **Receiver type** is **MTU-5C**
- 2. Select the Schedule
- 2.1. Manual or Automatic Start
- 2.2. Or for a specific schedule use, Single Shot, Daily or Weekly and click Add Schedule to define the time and date
- 3. Channels Settings
- 4. Define the Receiver Settings
 - Sampling Mode
 - Sampling Rate
- **5.** Ethernet **port** (consult the <u>Remote Networking</u> manuals)
- 6. Configuration Layout

To use the magnetic sensor data from a different recording or use a remote reference, all recordings **must** have a matching Sampling Mode and Sampling Rates. Otherwise, EMpower will not allow to process data using borrowed channels or remote reference.

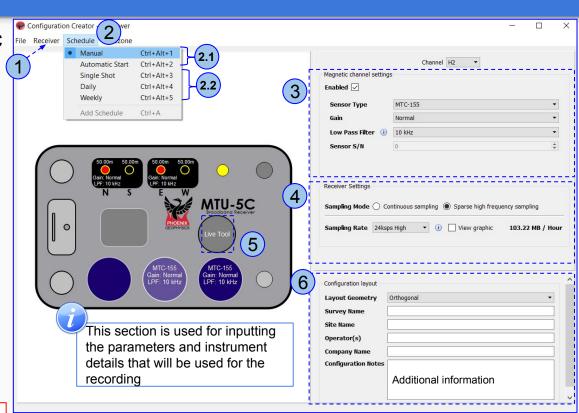

Electric Channel Settings

1. Select the **Electric** channel


2. Enable or Disable channel(s)

o Disable channels that you do not plan to use during the recording. This will save space on the SD card.

3. Select the desired **Gain** and **Low Pass Filter**

- o For most applications, Normal Gain and 10 kHz LPF are best
- **4**. Type **distances to the electrodes** of this channel if known
 - if not, they will need to be corrected later before data processing

Enabled

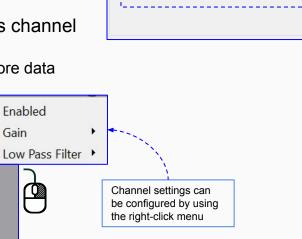

Enabled Gain

Enabled 🗸

Gain: Normal LPF: 10 kHz

50.00m



Magnetic Channel Settings

1. Select a **Magnetic** channel

2. Enable or Disable channel(s)

 Disable channels that you do not plan to use during the recording. This will save space on the SD card.

3. Select the correct Sensor Type


 If the sensor type is incorrect in the configuration file, the receiver will display a warning message. However, the recording will not be interrupted

4. Select the desired Gain and LPF

 For most broadband applications with MTC-100 series sensors, Normal Gain and 10 kHz LPF are best


5. Type the Serial Number of the sensor if required


- There is no need to type serial number for sensors MTC-155/MTC-185, since it will be automatically detected by the receiver.
- For older sensors, type the serial number of each sensor. If you don't know this information in advance, keep field notes to add this information later, after the recording is imported into EMpower

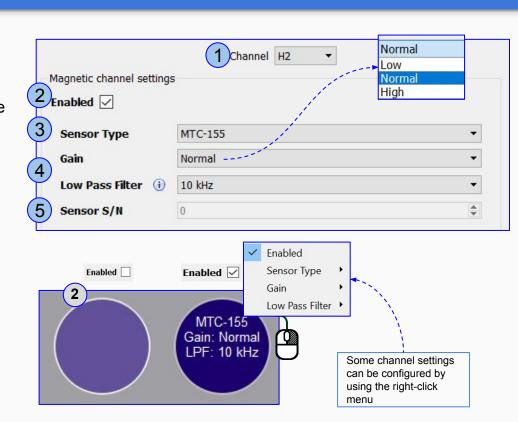

Saving a Configuration File

- 1. Insert the SD Card
 - The computer must be equipped with an SD card slot or use a USB card reader
- 2. Click the File menu
 - Save or Ctrl+S
 - Select the SD card
 - EMpower will automatically create the file "config.json"
- **3.** Save the configuration file (*config.json*) in the root folder of the **SD card**
- 4. Open the file explorer
 - o Right click SD card drive
 - Select Eject option
 - Pull out the SD Card

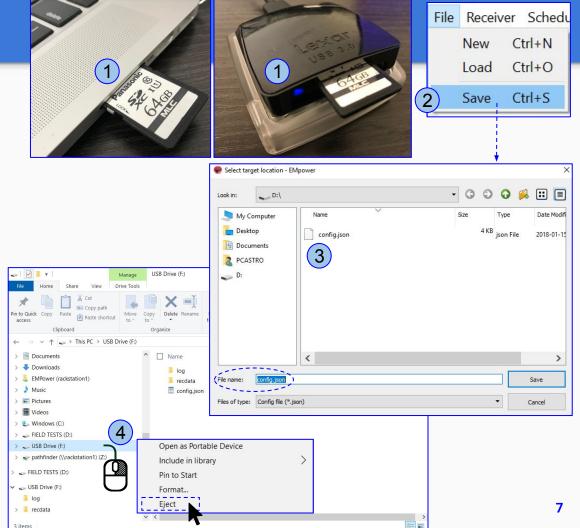

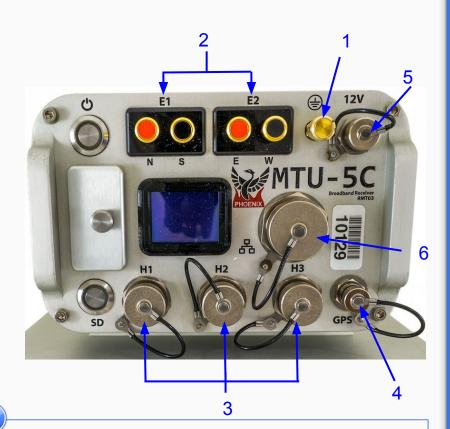

In the field, it is often most efficient to connect the components to the receiver following the order on the right

MTU-5C Connections

Start by connecting:

- **1.** Ground electrode
- Electrodes to channel E1(Ex) (N+, S-) and channel E2(Ey) (E+, W-)
- Magnetic sensors to channels H1(Hx), H2(Hy) and H3(Hz)
- 4. GPS antenna
- **5.** 12V DC Power Source
- **6.** Network connector

SD Card - Recording Data

Recording

- 1. Insert the SD card and close the cap
- 2. To turn on the receiver, press the **Power** button briefly, wait until both **LEDs** are solid blue
- 2.1. LED pattern for Automatic Start recording
- If the schedule type was configured as Manual, press the Power button briefly and release to start recording




*For any problems with the SD Card, check the <u>DAA24 System</u> <u>Troubleshooting manual</u>



2.1) Automatic Start

The recording starts automatically according to the schedule

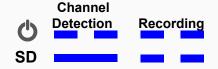

Indicators

Rapid, equal pulses
Solid color / Off

Briefly press and release the power button

Ready

Channels

Detection



The receiver auto-detects serial and model for magnetic sensors of the new generation (MTC-155/185). The information about the sensor is updated on the receiver screen only at power on and right after each recording starts.

Stopping a recording

- **1.** Press the **Power** button briefly and release to stop recording
 - Wait until both LEDs are steady blue
- 2. Turn off the receiver by pressing the **Power** button for a few seconds, until the **LEDs** will flash red
 - Wait until both LEDs turn off
- 3. Eject the SD card
 - Press the SD card and release, pull the SD card

1 Press the **Power** button briefly and release




- 2 Keep pressing the power button 3 sec and release
- Ready Shutdown Off






Importing and Field QC

- 1. Click the Field QC button
- 2. Select View data
- 3. Select the SD card
 - The recording creates two folders, log and recdata
- 4. Open the recdata folder
 - Select the recording file
 - Click Choose

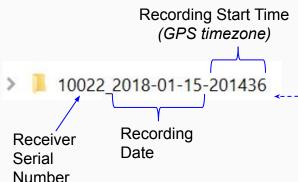


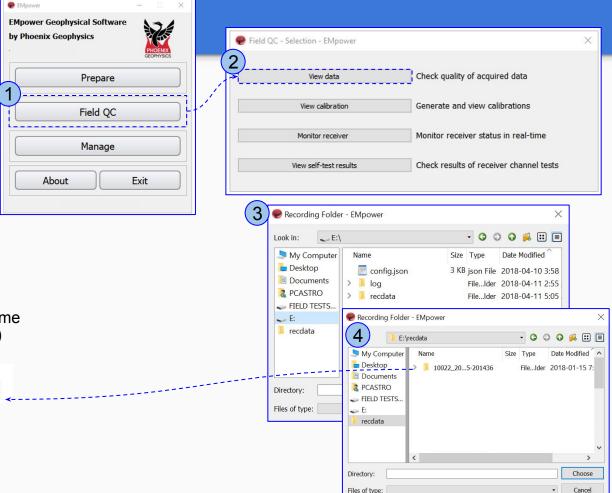

Field QC

Review and Process the recorded information

- Review the Electrode Resistance values and make the necessary corrections
 - Electrode Distance (m) to GND
 - E-Azimuth
 - External Filter
- **2.** Ensure that the magnetic sensors were detected correctly and make the necessary corrections
 - o Serial #
 - Polarity
 - H1-H3 Azimuth
- 3. View Recording Details (see page 14)
- **4.** After reviewing the information, **Process** the data (see next page)
 - The warning icon indicates that something might be wrong with the recording, review the recording information and make necessary changes if needed. Hover mouse pointer over the warning icon for more information.

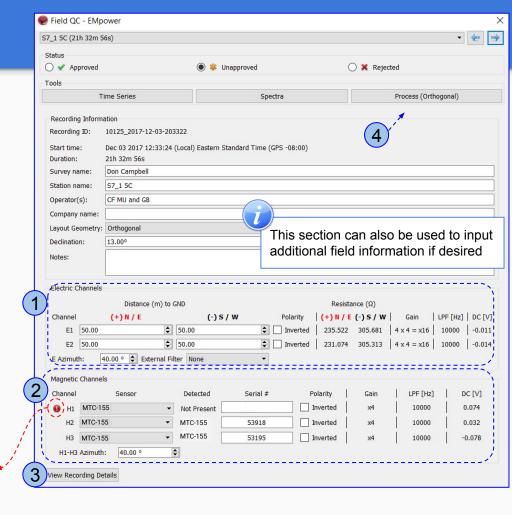

Process Data


- 1. Click the **Process** button
 - Verify that the channels and references selected are the desired ones
- **2.** Define the time period by entering a start and end date/time
- **3. Enable the electric power grid filter** that corresponds to the frequency carried by the power lines in the survey region (50Hz, 60Hz or None)
- 4. Click the Process button

5. A live display of the resistivity curve will

5

appear after a few seconds


*This resistivity curve is not saved. It is purely for QC purposes

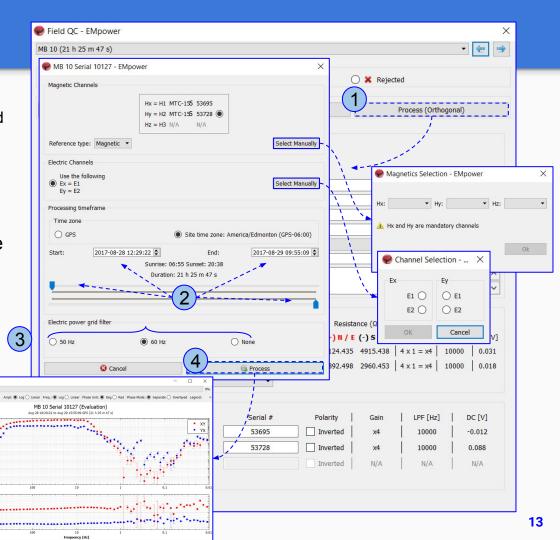

View Recording Details

Review that the following levels are within valid limits for quality control:

- 1. Battery Voltage
- 2. Internal Temperature
- 3. Number of Satellites
- 4. Saturated Frames
 - If saturation is not close to ~0%, review the channel configuration (see pages 4 6), the channel gain might be too high and/or there is artificial noise on your site
- 5. Time Series Level

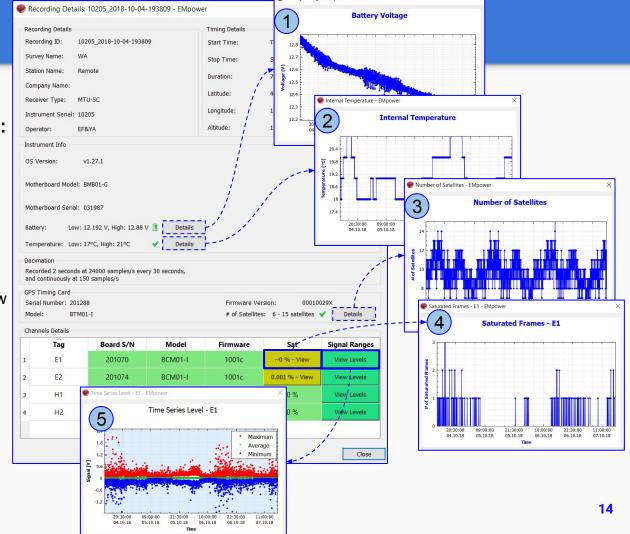

Battery Voltage - EMpower

Technical Support Contact



Please check out the <u>FAQs</u>
https://phoenixgeophysics.freshdesk.com/
Or email us at: support@phoenix-geophysics.com